


Getting start with Qsep₁₀₀

Document No.: F0001
Ver.A-201706

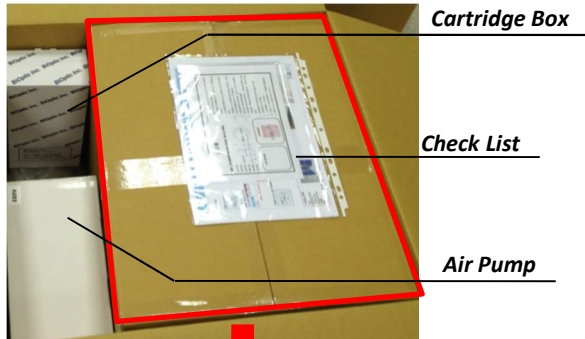


Install Qsep₁₀₀

1. Unpack air pump and tighten the connectors (labeled by the red squares) with the air tube



2. Plug Air pump into power slot (* Please make sure that voltage matches with air pump)

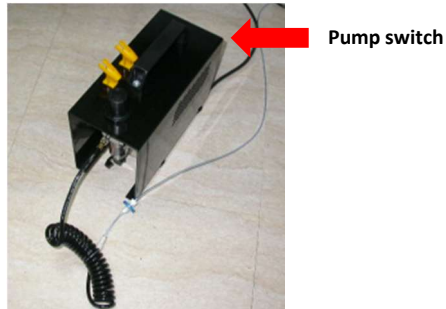

3. Plug in the Power Adapter



4. Connect the USB Cord



5. Plug in the air tube from the air pump and turn on the switch of pump



6. Remove the protecting foam



Your Qsep₁₀₀ is
READY FOR USE